


How to replace your ink pad

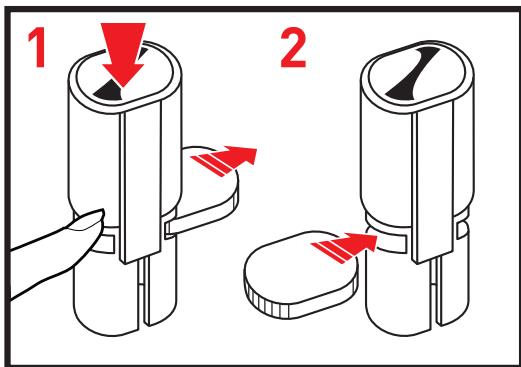

1. Press stamp downward slightly and push the old ink pad out using your index finger.
2. With the foam side facing down, slide the new ink pad into the stamp. Your stamp is now ready to use!