




How to replace your ink pad

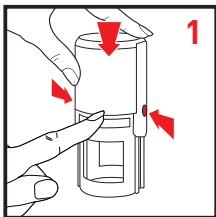

1. Press stamp downward while pressing side lock buttons until handle clicks into place.

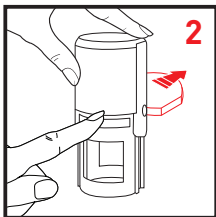

2. Push the old ink pad out of the stamp using your index finger.

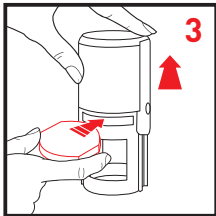

3. With the foam side facing down, slide the new ink pad into the stamp. Depress the handle to release the side lock buttons. Your stamp is now ready to use!